

# Thermostatic Shower Kit Installation Instruction


## I. Before Installation

Flush out pipework thoroughly to remove debris.


Turn off water supply.

Carefully take the kit out of the box and check for any scratches, wearing cotton gloves if possible.

Identify all components.

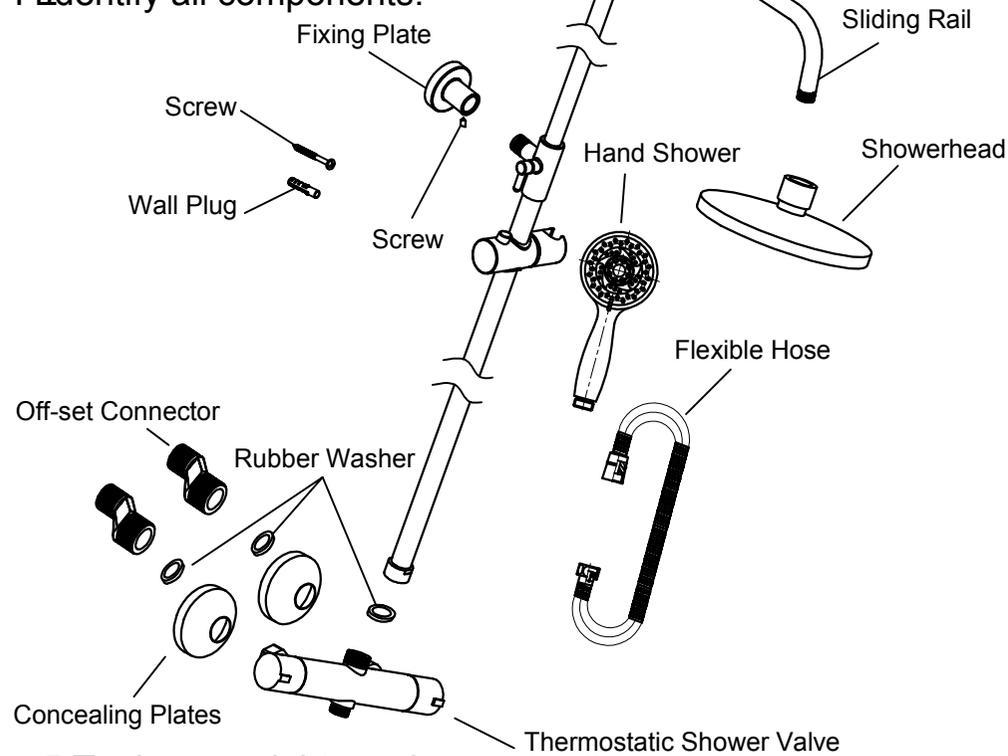


## 5. Tools you might need.

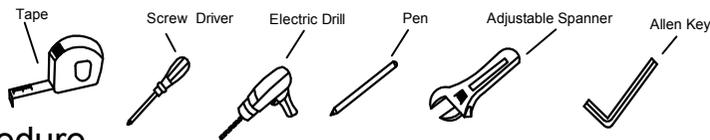


## II. Installation Procedure


1. Fit off-set connector to the water inlets in the wall, then screw the concealing plates onto the off-set connector until they come into contact with the wall. Seal with an appropriate sealant.

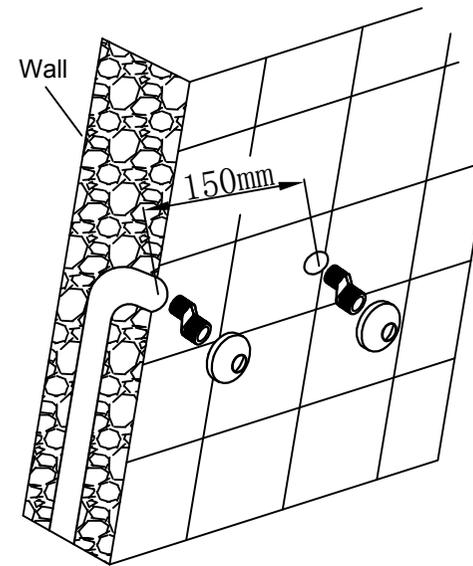

2. Fix the shower valve to the off-set connector using a spanner. Please use a cotton sheet inside of spanner to avoid any scratches. Make sure hot outlet is on the left and the cold outlet is on the right, otherwise it will affect the performance.

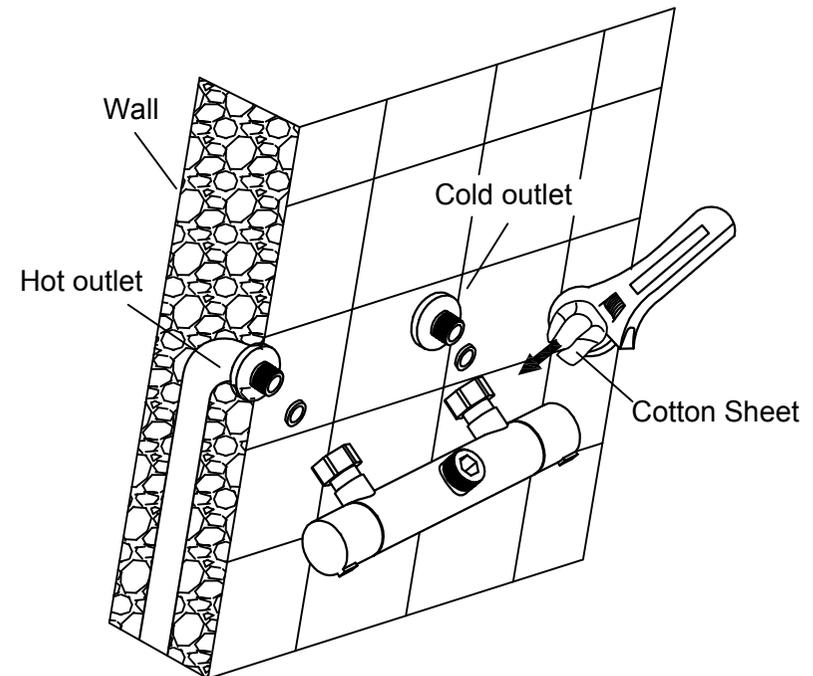


3. Measure the installation height of the shower kit.  
Mark two holes in the required position. Drill holes properly with electric drill and place the wall plugs into the holes. Fit the cap into the fixing plate.

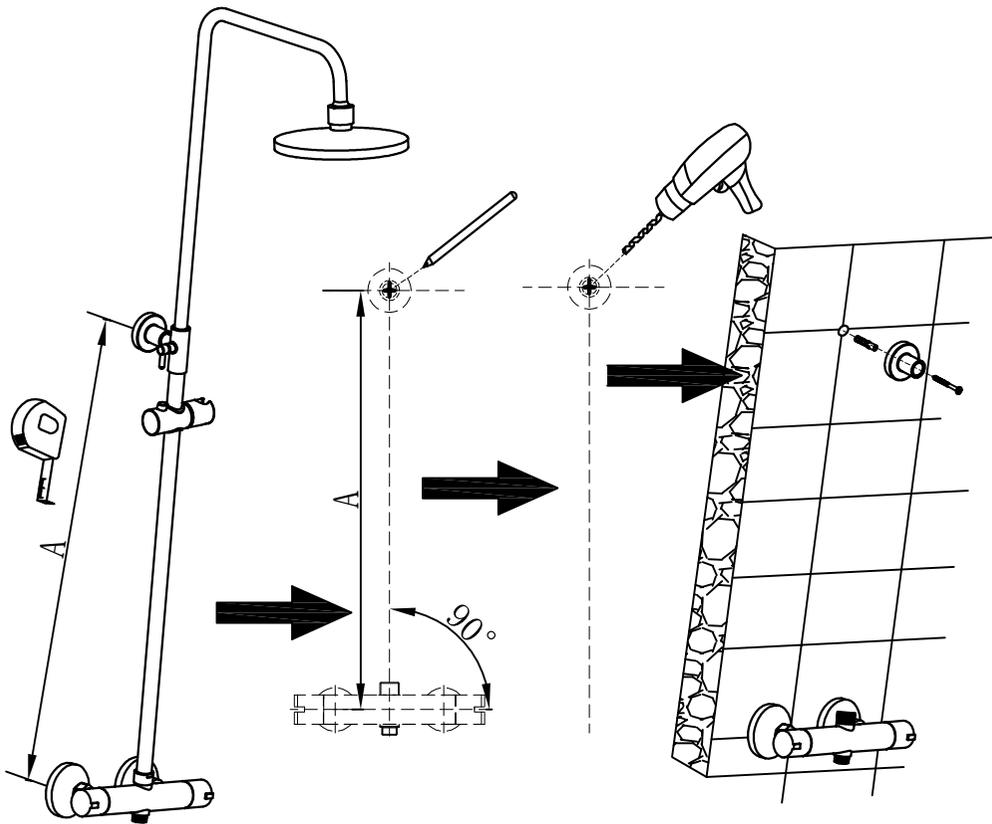


4. Align the shower valve and connector and tighten the nuts using an adjustable spanner. Fit screw to the fixing plate with allen key then secure the rail to the wall. Finally connect the hand shower to the flexible hose, flexible hose to the mixed water outlet and shower head to the top of sliding rail.

3

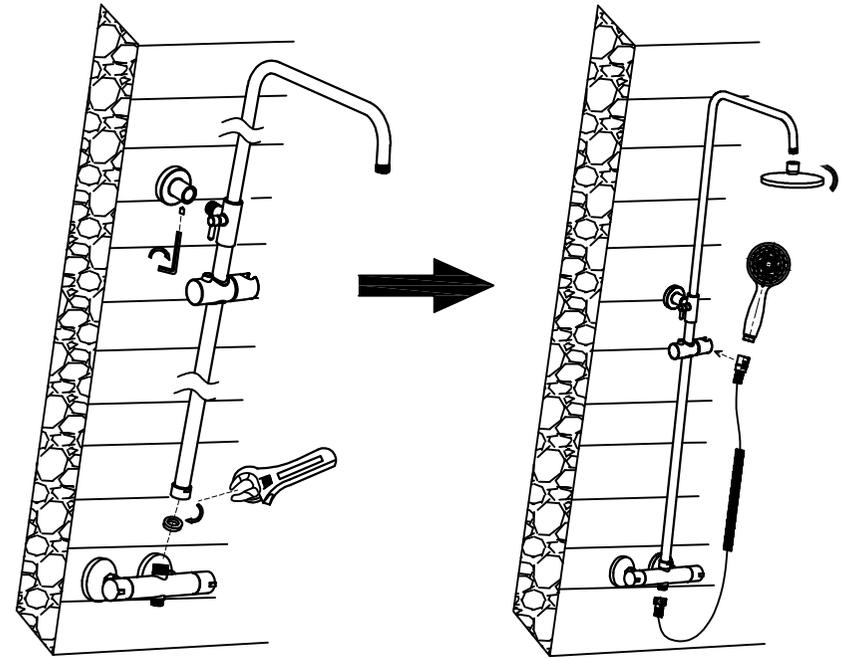

5. Adjust the height of sliding rail.  
6. Turn on the water supplies and check for correct operation.

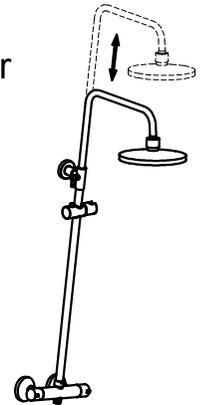

### III. After Care

1. This shower kit has a high quality finish and should be treated with care.
2. An occasional wipe with a mild washing-up liquid on a soft damp cloth followed by a thorough rinsing is all that is required.
3. Do not use an abrasive or chemical household cleaner as this may cause damage.

4